

# PICLE-1-II

# Manual Pipe Cutting Machine

#### **Features and Benefits**

- Manual pipe cutting machine
   No power/electricity needed to cut pipe; ideal for field use
- Oxy-fuel pipe cutter
   Bevel cuts or straight cuts on steel pipe
- Interlocking link chain system
   Swiftly adapts to any pipe diameter
- Extremely smooth feedWorm gear with low transmission ratio
- Accurate bevel angle
   Bevel collar with angle indicator for easy and accurate bevel setting
- **Lightweight**At only 8.5 kg, this unit is easy to carry, operate and maintain
- Very low maintenance

**Picle-1-II** is a manually operated pipe cutting machine for cutting and bevelling pipes. Equipped with a chain and worm gear drive system with low transmission ratio, leading to an absolutely frictionless feel.



## **Extremely smooth feed**

# Quality pipe cutting without electrical power

PICLE-1-II's extremely smooth feed makes the machine handy and easy to operate. The drive chain is comprised of durable, interlocking links that can easily be added or removed for quick change of pipe diameters.

A graduated bevel collar ensures accurate bevel setting. The control valves for fuel, preheat and cutting oxygen are positioned from heat yet conveniently placed for easy operator use.



## **Accessories**

## Optional accessories

Accessory	Stock #	Description
Extension chain 1 m	31131	1 m chain links



Extension chain 1m



Chain links can be adjusted easily for various pipe diameters.

# **Type and Specification**

## Specification

	PICLE-1-II
Cutting thickness	5 -50 mm
Cutting speed	Manually adjusted
Cutting diameter	Ø 114 ~ 600 mm
Torch up/down stroke	50 mm
Torch lateral stroke	100 mm
Bevel angle	0 ~ 45°
Drive system	Worm gear and chain
Input power	Not required
Dimension	L410 x W210 x H410 mm
Weight	8.5 kg

## **Types**

Model	Stock #
PICLE-1-II	90110

### Scope of delivery

Scope of delivery	
Machine body with torch set	
Chain link (80 pcs. for 600mm pipe diameter)	
Cutting nozzles (102HC or 106HC, size #0, 1, 2)	
Power cable	
Standard tool set	
Operation manual	



KOIKE Portable Machines and Gas Equipment v.1.04 © 2016 Koike Europe B.V. Technical changes as well as errors and printing mistakes are reserved. 11/201

## **Headquarter:**

### Koike Europe B.V.

Grote Tocht 19 1507 CG Zaandam The Netherlands Tel +31-(0)75 - 612 - 7227 Fax +31-(0)75 - 670 - 2271 info@koike-europe.com www.koike-europe.com

# Koike Europe B.V. Germany Branch Office

Im Löchel 2 35423 Lich-Eberstadt Deutschland

Tel +49-(0)6004 - 91 - 6930 Fax +49-(0)6004 - 91 - 6931- 01 info.germany@koike-europe.com www.koike-europe.com

#### **Koike France S.a.r.l.**

Espace Mercure Z.A.E. Les Dix Muids 59770 Marly France

Tel +33-32730-4343 Fax +33-32730-1250 info@koike-europe.com www.koike-europe.com

#### **Koike Italia Srl**

Via Papa Giovanni XXIII, n 45 20090 - RODANO (MILANO) Italy

Tel +39-02953 - 28 - 717 Fax +39-02739 - 60 - 447 info@koike-europe.com www.koike-europe.com

#### **Koike Middle East FZE**

SAIF Zone Sharjah-UAE P.O. Box 122978 United Arab Emirates

Mobile +971561177615 / +971566453803 Fax +9716-5312805 b.pandey@koike-europe.com www.koike-europe.com